PHEROCON® STKY™ CANOPY™

Assembly Instructions for use with PHEROCON STKY Liner

- FOR USE IN MATING DISRUPTED AND CONVENTIONAL ORCHARDS -

Materials Needed:

A. (1) PHEROCON STKY CANOPY
B. (1) PHEROCON STKY Liner

STKY CANOPY

STKY Liner

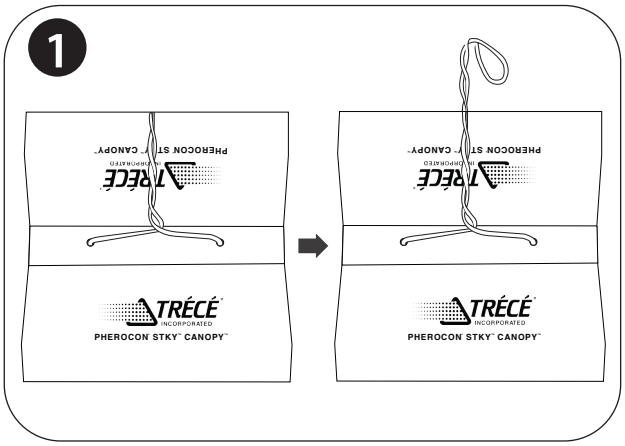

1. Straighten wire that is wrapped around the CANOPY.

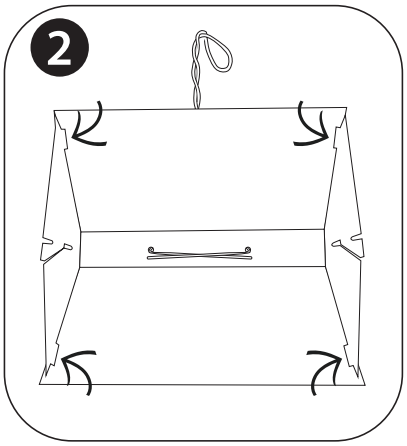

2. Hold the CANOPY upside down, fold each side of the CANOPY inward and insert the 4 corner tabs into notches.

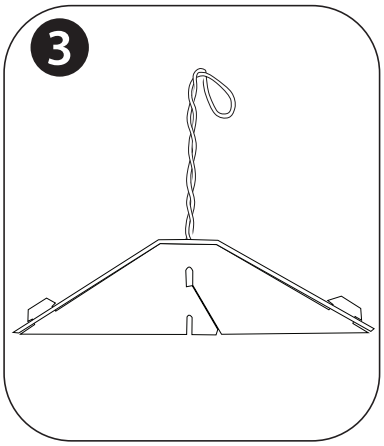

3. Insure that all 4 tabs are secure in the CANOPY.

Liner Placement

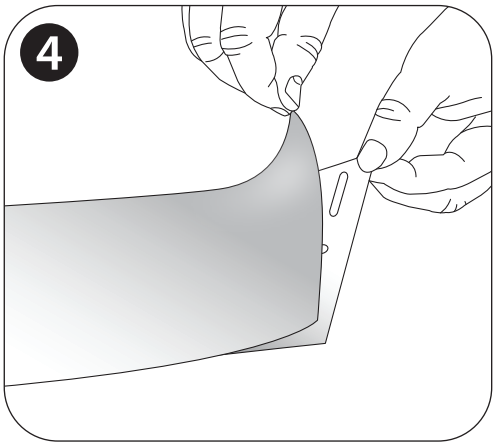

4. Remove release paper from <u>both</u> sides of the adhesive coated STKY liner.

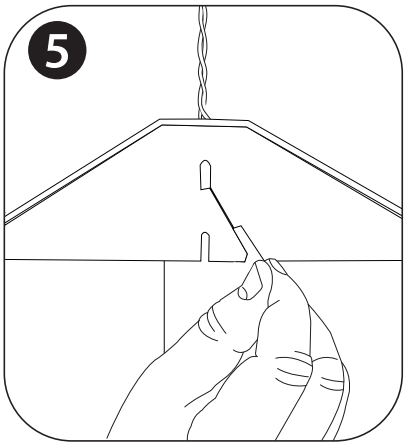

5. While holding the CANOPY, grasp one side adhesive free corner of STKY liner; slide into the oblique slit on one end of CANOPY and secure as pictured in step 6.

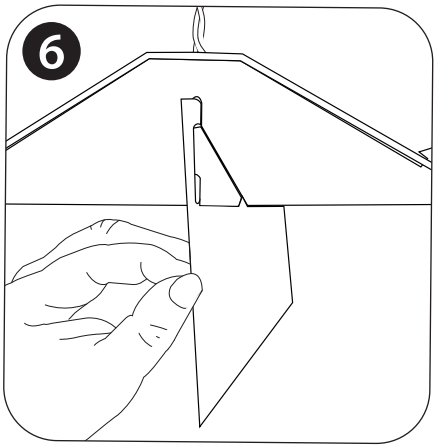

6. Grasp the opposite side of the STKY liner and repeat the foregoing instructions. Insure that both ends of the STKY liner are secure in the CANOPY.

Visit our website: www.trece.com or call 1-866-785-1313

Please see Trécé's IPM Partner® Guidelines for further instructions.

TRÉCÉ® INCORPORATED
INSECT PHEROMONE & KAIROMONE SYSTEMS
Your Edge - And Ours - Is Knowledge.

© 2025, Trécé Inc., Adair, OK USA · ® is a registered trademark and TM is a trademark of Trécé Inc., Adair, OK 74330 USA
Patent Pending