PHEROCON® STKY™ CANOPY™

Assembly Instructions for use with PHEROCON STKY Liner & PEEL-PAK™ STK-TIGT™ Lure

- FOR USE IN MATING DISRUPTED AND CONVENTIONAL ORCHARDS -

Materials Needed:

A. (1) PHEROCON STKY CANOPY
B. (1) PHEROCON STKY Liner
C. (1) PHEROCON PEEL-PAK STK-TIGT Lure

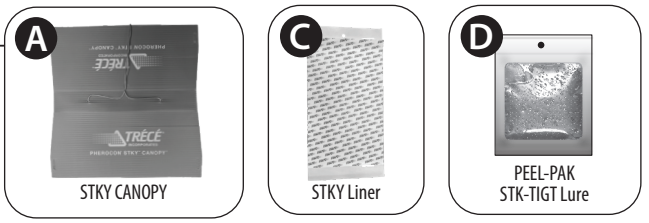

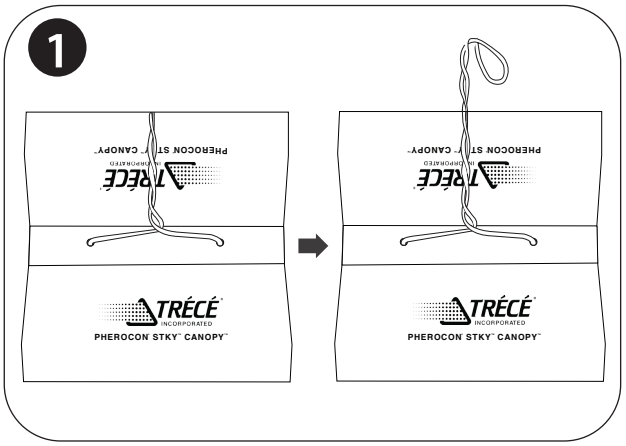

1. Straighten wire that is wrapped around the CANOPY.

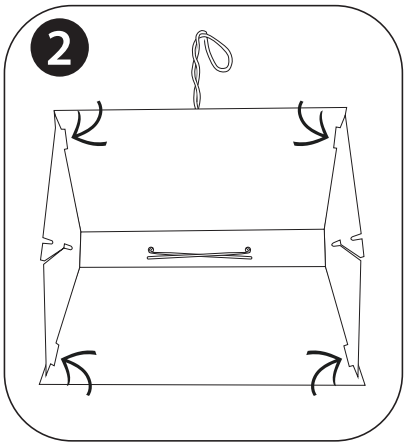

2. Hold the CANOPY upside down, fold each side of the CANOPY inward and insert the 4 corner tabs into notches.

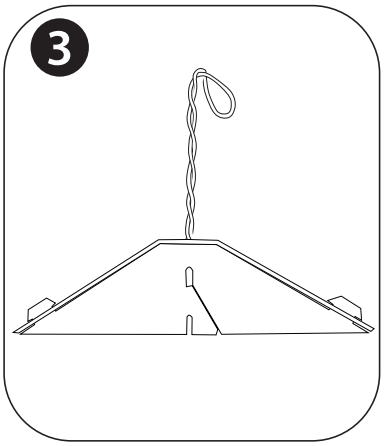

3. Insure that all 4 tabs are secure in the CANOPY.

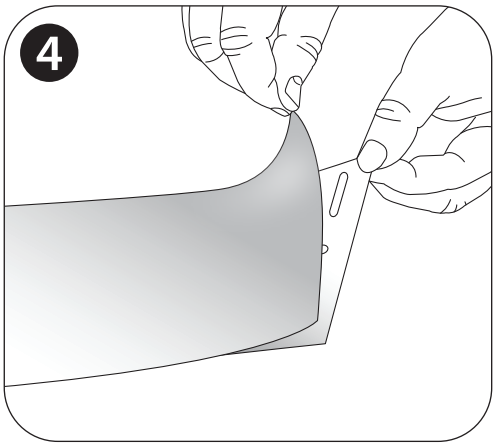

4. Remove release paper from <u>both</u> sides of the adhesive coated STKY liner.

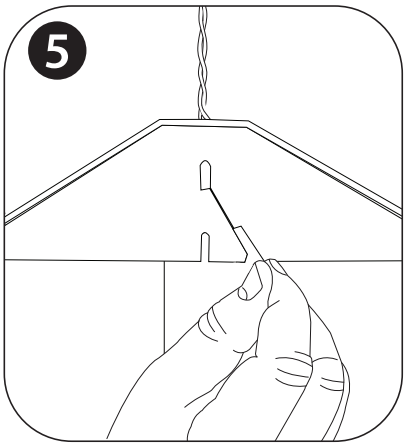

5. While holding the CANOPY, grasp one side adhesive free corner of STKY liner; slide into the oblique slit on one end of CANOPY and secure as pictured in step 6.

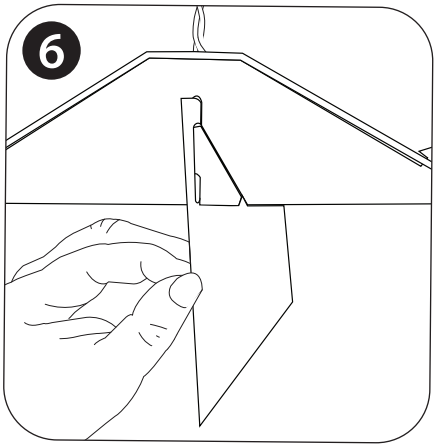

6. Grasp the opposite side of the STKY liner and repeat the foregoing instructions. Insure that both ends of the STKY liner are secure in the CANOPY.

<u>Lure placement instructions on back</u>

<u>USE ONLY ONE LURE PER CANOPY.</u>
<u>ALWAYS WEAR GLOVES WHEN INSTALLING LURES; WASH HANDS AFTER USE.</u>

Visit our website: www.trece.com or call 1-866-785-1313

Please see Trécé's IPM Partner® Guidelines for further instructions.

STORAGE RECOMMENDATION:
Keep unopened factory-sealed packages in a cool place (<75°F / 24°C maximum) for short periods until used. Refrigerate unused packages. Refrigerate unopened packages to carry over for annual storage. DO NOT FREEZE.

TRÉCÉ® INCORPORATED
INSECT PHEROMONE & KAIROMONE SYSTEMS
Your Edge - And Ours - Is Knowledge.

© 2024, Trécé Inc., Adair, OK USA · ® is a registered trademark and TM is a trademark of Trécé Inc., Adair, OK 74330 USA
Patent Pending

PHEROCON® STKY™ CANOPY™

Assembly Instructions for use with PHEROCON STKY Liner & PEEL-PAK™ STK-TIGT™ Lure

Lure Placement

7

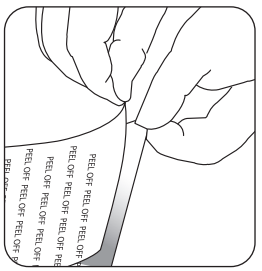

7a. Remove barrier film from the front of the PEEL-PAK STK-TIGT Lure.

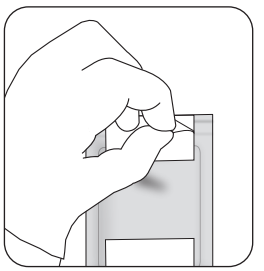

7b. Then remove release paper tape from the back of the lure.

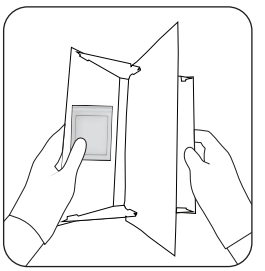

7c. Stick the lure with the red surface exposed inside of the CANOPY top.

USE ONLY ONE LURE PER CANOPY.
ALWAYS WEAR GLOVES WHEN INSTALLING LURES; WASH HANDS AFTER USE.

STORAGE RECOMMENDATION:
Keep unopened factory-sealed packages in a cool place (<75°F / 24°C maximum) for short periods until used. Refrigerate unused packages. Refrigerate unopened packages to carry over for annual storage. DO NOT FREEZE.

Visit our website: www.trece.com or call 1-866-785-1313

Please see Trécé's IPM Partner® Guidelines for further instructions.

TRÉCÉ® INCORPORATED
INSECT PHEROMONE & KAIROMONE SYSTEMS
Your Edge - And Ours - Is Knowledge.

© 2024, Trécé Inc., Adair, OK USA · ® is a registered trademark and TM is a trademark of Trécé Inc., Adair, OK 74330 USA
Patent Pending